

## Operating instructions

# SR 501 EX

## Battery



## General information

For the longest lifetime, the battery SR 501 EX should have regular charging and discharging cycles.

Best results are achieved with full discharge directly followed with a full charge.

The battery can be deep discharged if it is not used for a longer time, which may result in damage to the battery cells.

Prolonged maintenance charge could also lead to a premature wear out of the battery cells.

## 1. Removing the battery



**1.1** Place the fan unit upside down.

Grip the fan unit with one hand with the thumb placed over the battery.



**1.2** Raise the battery cover a few centimeters and push with the thumb and withdraw the battery.

## 2. Charging the battery



**2.1** Connect the battery to the battery charger.



**2.2** Make sure that the pin on the cord's plug is fitted into the groove on the battery.



**2.3** Connect the charger plug to a wall socket.

Charge the battery to full capacity at room temperature, about 2 hours.

Green LED lights up when fully charged battery.



**2.4** Hold the charger plug and pull straight out when unplugging the charger from the battery.

Do NOT pull on the cord.

Do NOT twist the plug.

## 3. Battery gasket



**3.1** Check that the gasket around the opening to the battery terminals on the underside of the battery is undamaged.



**3.2** To make the battery mounting easier, grease the gasket with Vaseline provided in the product package.

## 4. Storage of battery

During long-term storage, a scheduled charging procedure is recommended, as follows:

Charge the battery in accordance with section 2.

Store the battery in room temperature.

Repeat charging after 6 to 8 weeks as long as the storage continues.

Fully charge the battery before planned usage.